



UNPACKING INSTRUCTIONS

www.liftgator.com

501 Oakwood Road | Watertown, SD 57201

(605) 753-0919

STEP 1

Remove the stretch wrap from the packaging. Then remove the top and bottom parts of the box.

Use caution when removing the bottom of the box so as to not hit the platform switch installed on the passenger side upright.



STEP 2

At the bottom of the pallet on the driver side of the unit there is a stack of boards screwed into the bottom of the pallet. Remove the screws and the boards.



STEP 3

Unscrew and remove the jacks from the pallet and remove the skates from inside the Liftgator.



STEP 4

Remove the nuts on the driver side jack plate. Install a jack on the driver side jack plate, then install a skate onto the jack. Repeat this step for the passenger side.



STEP 5

Remove the loose 2x4s from the pallet and place them underneath the skates on both sides. Lower the skates until they make contact with the boards.



STEP 6

Remove the strap holding the carriers to the pallet from both sides.



STEP 7

Remove the T-handle from inside of the box. Screw the T-handle into the hitch pin installed in the bracket holding the unit to the pallet. Tighten the T-handle into the hitch pin and use it to remove the pin. Keep the T-handle and hitch pin inside the box of the Liftgator when not in use.



STEP 8

Fully extend the jacks so that the unit lifts off the pallet. Once clear, carefully roll the unit off the 2x4s and away from the pallet. Your LiftGator is now ready to install onto your vehicle.

